

# Spare Parts List -

418-1L, 418-2L, 419-1L,  
419-2L & 420-2L Sprayer

Item #	Part #	Description	Qty.	Total
1	4181	Cover		
2	4182	Handle		
3	4183	Lid		
4	4184	Lock Button		
5	4185	Trigger		
6	4186	Spring		
7	4187	Pump Base		
8	4188	O-ring		
9	4189	Gasket		
10	41810	Spring		
11	41811	Ball		
12	41812	Relief Valve		
13	41813	Pin		
14	41814	O-ring		
15	41815	O-ring		
16	41816	Cylinder		
17	41817	Gasket		
18	41818-1L	1L Bottle		
18	41818-2L	2L Bottle		
19	41819	Filter		
20	41820	Plate		
21	41821-1L	1L Tube		
21	41821-2L	2L Tube		
22	41822	Adapter		
23	41823	O-ring		
24	41824	Shut-off Plug		
25	41825	O-ring		
26	41826	Connector		
27	41827	Pin		
28	41828	Nut		
29	41829	Washer		
30	41830	O-ring		
31	41831	O-ring		
32	41832	Connector		
33	41833	Screw		
34	41834	Cup		
35	41835	O-ring		
36	41836-1	Base		
36	41836-2	Base		
37	41837	O-ring		
38	41838	Retainer		
39	41839-1	Nozzle		
39	41839-2	Brass Nozzle		
40	42040	O-ring		
41	42041	Spray Wand		
42	42042	O-ring		
43	42043	O-ring		
44	42044	Metal Wand		
45	41945	O-ring		
46	41946-1L	1L Metal Wand		
46	41946-2L	2L Metal Wand		

#41836-2 Base(Available on brass nozzle-#41839-2)

